


# SQ 系列

## 外形尺寸

### Branch Tee

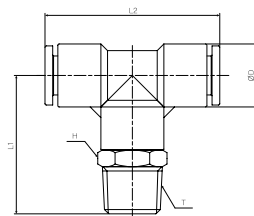


### SQT Type

单位: mm

型号	气管外径	T(螺纹)	L1	L2	D	H
SQT 04-M5	04	M5	22.4	34.2	10.2	10
SQT 04-01S		R 1/8	24.9			10
SQT 04-02S		R 1/4	27.9			14
SQT 06-M5	06	M5	23.5	38.6	12.9	12
SQT 06-01S		R 1/8	26.0			12
SQT 06-02S		R 1/4	29.0			14
SQT 06-03S		R 3/8	30.0			17
SQT 08-01S	08	R 1/8	27.0	40.8	14.7	14
SQT 08-02S		R 1/4	29.9			14
SQT 08-03S		R 3/8	30.9			17
SQT 08-04S		R 1/2	35.4			22
SQT 10-01S	10	R 1/8	30.0	49.2	18.3	17
SQT 10-02S		R 1/4	33.0			17
SQT 10-03S		R 3/8	34.0			17
SQT 10-04S		R 1/2	38.4			21
SQT 12-02S	12	R 1/4	34.4	57.6	21.2	17
SQT 12-03S		R 3/8	35.4			17
SQT 12-04S		R 1/2	38.9			21

## 外形尺寸

### Straight Union

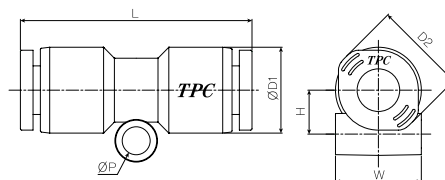

### SQH Type

单位: mm

型号	气管外径	D <sub>1</sub>	D <sub>2</sub>	L	H	P	W
SQH04-00	04	10.2	10.0	31.8	5.8	4.2	10.2
SQH06-00	06	12.9	14.0	33.8	6.6	4.2	12.9
SQH08-00	08	14.7	14.7	35.8	7.6	4.2	14.7
SQH10-00	10	18.3	18.6	42.2	8.9	4.2	18.3
SQH12-00	12	21.2	23.5	46.8	9.8	4.2	20